



# INSTALLATION INSTRUCTIONS

**PART No.**

**FB21292**

**Toyota® 2005+ Tacoma  
Bed Rail Hi-Lift Jack Mount**



## REQUIRED TOOLS

19mm Socket

-Help of a friend

## KIT CONTAINS

Bed Rail Hi-Lift Jack Mount Bracket  
M12 Hex Bolt  
M12 Flat Washer  
M12 Lock Washer  
T-Nut  
Carriage Bolt  
Wing Nut

## QTY

2  
2  
2  
2  
2  
2  
2

2129200

## Toyota® 2005+ Tacoma Bed Rail Hi-Lift Jack Mount

### 1) PREPARE YOUR BED

Open your bed and decide where you would like to install your jack, while considering its clearance with the rest of the vehicle. Remove the trail rail cap and insert the 2 included T-Nuts into it. Slide them to your desired location.




### 2) INSTALL THE MOUNT

Loosely install each bracket using the included hex bolts and washers.



Determine the spacing needed for your jack. Once you're satisfied with the bracket location, secure the bolts with a 19mm socket.

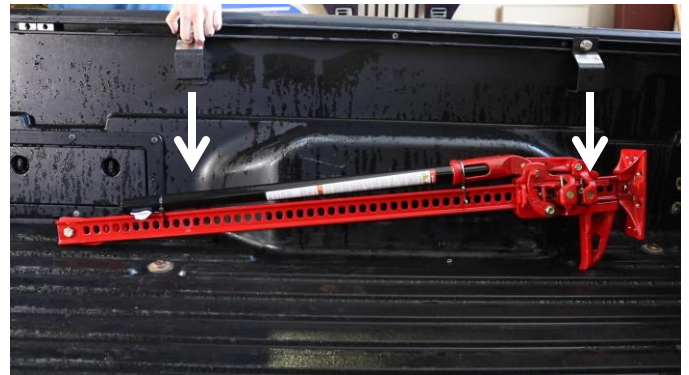

### 3) INSTALL THE JACK

Begin installing your jack onto the brackets. Push the included carriage bolts through the back of the bracket until the square flange fits into place.



Lift the jack over the bolts, and secure it with the 2 included wing nuts.



### 4) ENJOY YOUR BED RAIL HI-LIFT JACK MOUNT