




INSTALLATION INSTRUCTIONS

PART No.

FB21310

**Toyota® 2016+ Tacoma 6' Bed
Front-Bed Molle Panel**

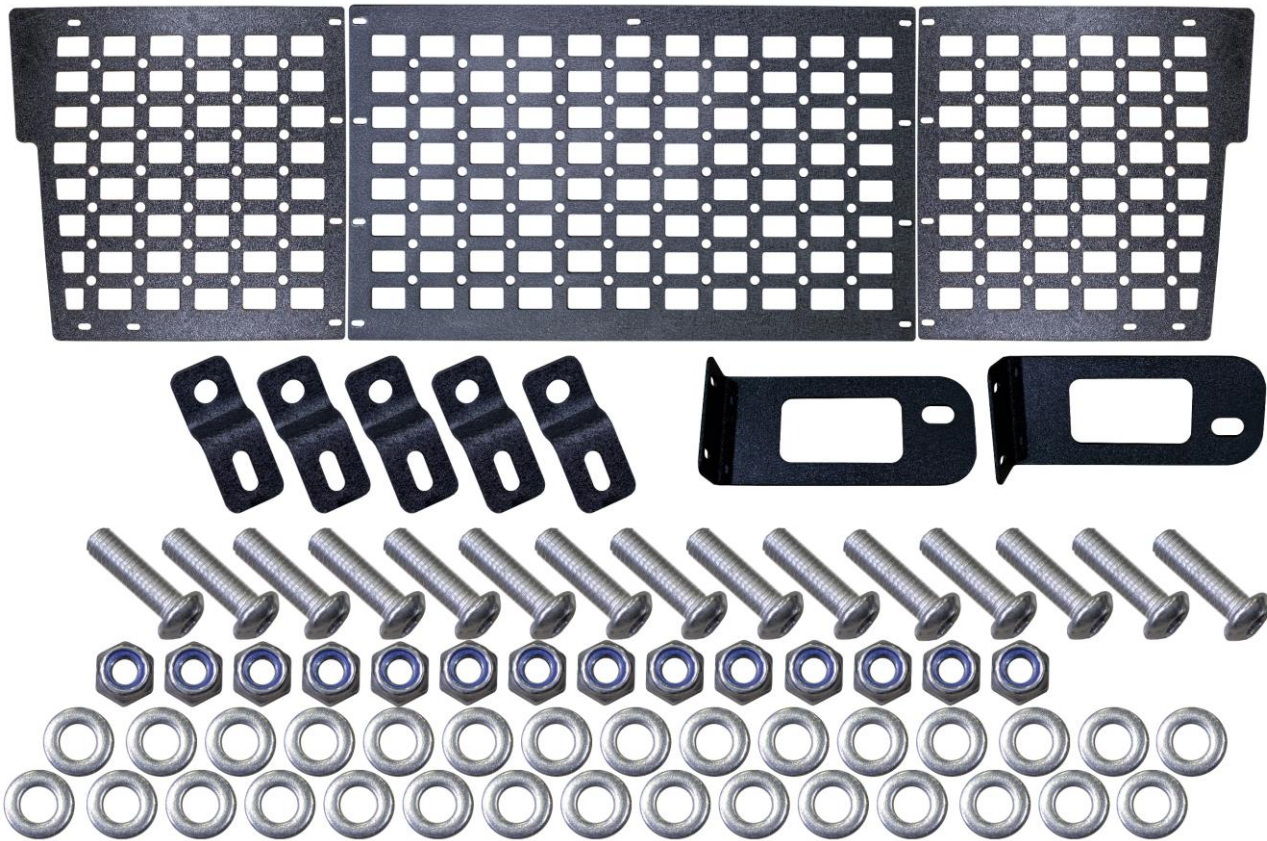

REQUIRED TOOLS

- T-30 Torx
- 4mm Allen
- 10mm Wrench
- T-55 Torx

KIT CONTAINS

- Center Molle Panel
- Molle Extension Panel
- M6 Button Head Bolt
- M6 Flat Washer
- M6 Nyloc Nut
- Stand-Off
- Bed Bracket

QTY

- 1
- 2
- 15
- 30
- 15
- 5
- 2

INSTALLATION INSTRUCTIONS


PART No.

FB21310


**Toyota® 2016+ Tacoma 6' Bed
Front-Bed Molle Panel**

ASSEMBLE THE PANEL

Begin assembling the panel by lining up the left and right bolt holes, and secure the bottom three holes on each side with the included bolts, washers, and nuts with a 10mm socket and 4mm allen key.

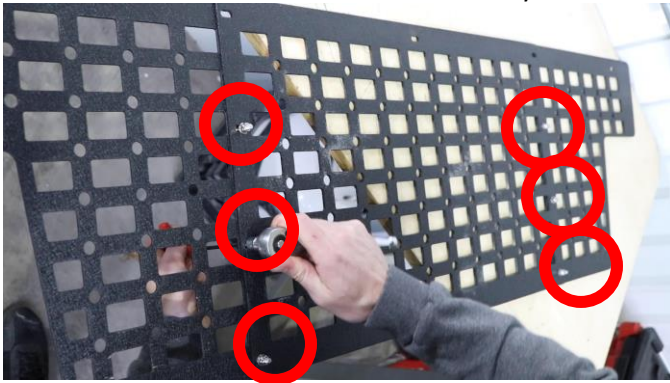


Ensure the top mounting holes in each panel are pointed upward.

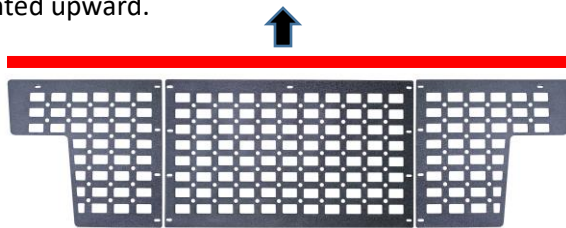

REMOVE BED & BED LINER BOLTS

With a T-30 torx bit, remove the 5 bed liner bolts located just below the vehicle's back window, within the rail. Retain these as they will be used in the next step.

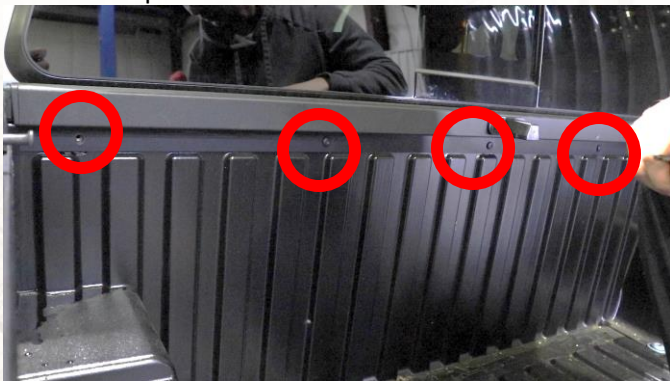

With a T-55 Torx Bit, remove the 2 bed bolts closest to the bed wall.



Next, with the remaining hardware, install the included stand-offs into the 5 upper holes of the panel so that the larger holes touch the plate, and the bracket pushes over the panel. Followed by installing the Bed Brackets into the bottom 8 holes so that the large spacing lines up with the bed bolt holes.





INSTALLATION INSTRUCTIONS

PART No.

FB21310

**Toyota® 2016+ Tacoma 6' Bed
Front-Bed Molle Panel**

INSTALL PANEL

Place the panel up to the bed while ensuring the stand-offs line up with the bed liner holes. With the 5 bed liner bolts and a T-30 Torx, install the panel onto the bed wall. Followed by the 2 Bed Brackets and bolts with a T-55 Torx.

