



INSTALLATION INSTRUCTIONS

PART No.

FB21354

**Chevy/GMC 99-06 Silverado/Sierra
Roof Lightbar Brackets**



REQUIRED TOOLS

10mm Socket
Marker
Center Punch
Hammer
Drill
9/16" Drill Bit
Nutcert Tool
Allen Wrenches

KIT CONTAINS

Roof Brackets (Driver/Passenger)
M6 Nutcert
M6x1mm Button Head Bolt
Foam

QTY

1ea
6
6
2

2135400

INSTALLATION INSTRUCTIONS

PART No.

FB21354


**Chevy/GMC 99-06 Silverado/Sierra
Roof Lightbar Brackets**

1) PREPARE YOUR VEHICLE

Open the vehicle's door and slightly peel back the weather strip. An inch from where the windshield meets the roof, place the bracket onto the vehicle and mark the bolt hole locations.



With a 9/16" drill bit, drill out the holes until the included nutcerts fit into them.

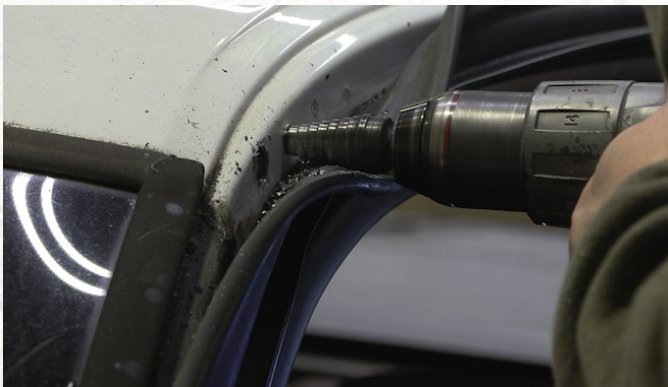

2) INSTALL

With a nutcert tool, install the included nutcerts into the drilled holes.



Place the included foam over the holes.



Install the side specific brackets with the included hardware. You can identify which side is which by the top flange pointing towards the front of the vehicle.



Install your Light Bar.