



491 W. Garfield Ave., Coldwater, MI 49036

Phone: 517-279-2135

Web/live chat: www.bds-suspension.com

E-mail: tech-bds@ridefox.com

Part#: 55326


Product: Steering Stabilizer

READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO INSTALLATION OF SYSTEM AND OPERATION OF VEHICLE.

SAFETY WARNING BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

INSTALLATION INSTRUCTIONS

1. Raise vehicle and support the frame with jack stands.
2. Remove the skidpan.
3. Install the steering linkage bracket using the u-bolts supplied. Do not tighten at this time.
4. Install the supplied hourglass bushings and sleeves in to the cylinder eyes with a bench vise, c-clamp or equivalent.
5. Install the rod end in to the steering linkage bracket and turn the wheel full left. Compress the cylinder completely and pull back out 1/2". Place the frame mount bracket on the can end of the cylinder using the supplied fasteners. Position the frame bracket against the frame and mark the mounting holes. (Fig 1)

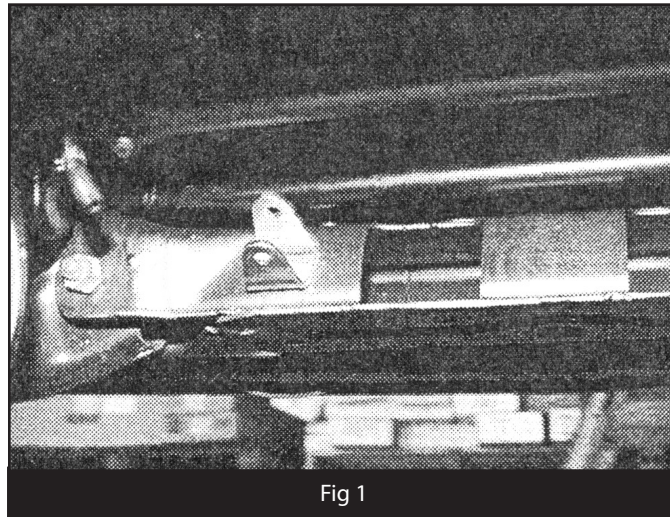

6. Drill the two holes to 11/32" and install the frame mounting bracket using the supplied hardware.
7. Attach the body end of the shock to the installed mounting bracket with the supplied hardware. Double check that the steering wheel is full left and the cylinder is extended about 1/2". Tighten the linkage mount u-bolts.
8. Perform a complete steering sweep to make sure that there is not interference. Reinstall skid pan.
9. Periodically inspect the assembly for tightness.