

FISHBONE
OFFROAD



INSTALLATION INSTRUCTIONS

PART No.

FB47169

**07-18 JK Wrangler
Tailgate Spare Tire Bump Stop**



REQUIRED TOOLS

Ratchet
Sockets
Cutting Utility

KIT CONTAINS

Tailgate Bump Stop

QTY

2

INSTALLATION INSTRUCTIONS

PART No.

FB47169

07-18 JK Wrangler

Tailgate Spare Tire Bump Stop

1) PREPARE

Remove your vehicle's existing tire from the tire carrier by loosening its lug nuts.



2) REMOVE

Firmly grip the existing bump stops and pull them out and away from the tailgate.



3) INSTALL

Insert your new Fishbone Offroad bump stops into the tailgate while simultaneously turning it to ensure a snug fit.



4) TRIM

Attempt to resecure your spare tire. If the bump stop prevents you from doing, or makes it very difficult, carefully trim away extra material while following the trim lines. Repeat on the opposite side.




INSTALLATION INSTRUCTIONS

PART No.

FB47169

07-18 JK Wrangler

Tailgate Spare Tire Bump Stop

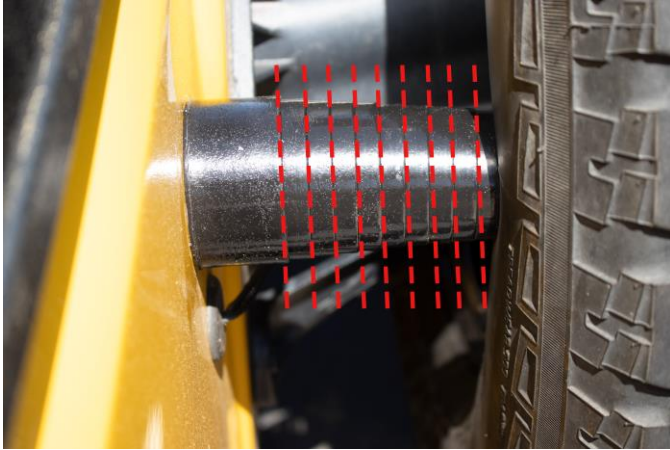

**ENJOY YOUR FISHBONE OFFROAD TAILGATE BUMP
STOPS**