



STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: www.pypesexhaust.com/install

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS




SFM81 MS / SFM81 MSB

SFM81 MS / SFM81 MSB: 2015-2017 Mustang Axleback Exhaust



Pypes Performance Exhaust
2705 Clemens Rd B103 Hatfield, PA 19440
www.pypesexhaust.com 800-421-3890

Thanks again for purchasing your new stainless steel Pypes Performance Exhaust 2015-2017 Mustang GT axleback system. Please be sure to confirm all the components in the kit were received in your shipment before beginning installation. If you find any components missing, please contact our office at 800-421-3890 for replacement. Installation of these kits will require a few simple tools: jack stands, 15mm wrench, cutting device and penetrating oil. For a quicker and tighter installation, air tools are recommended. Technical assistance is available both online at www.pypesexhaust.com or 800-421-3890.

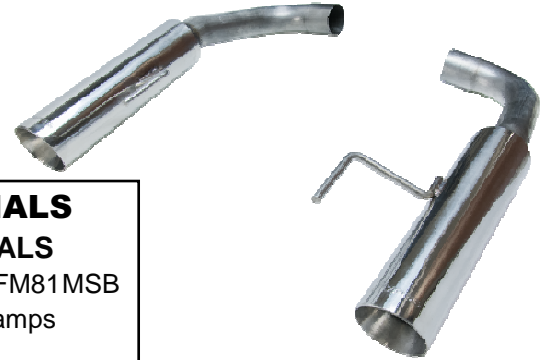

Required Tools
15mm wrench
jack stands
cutting device
penetrating oil
(air tools recommended)

BILL OF MATERIALS

QTY	MATERIALS
1 SET	SFM81MS or SFM81MSB
2 EACH	HVC21 Clamps

- 1) Begin by placing the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation.
- 2) This axleback system installation does not require removal of the factory exhaust.



Cut the factory system close to the bend that leads to the muffler. This will give you the maximum amount of material for adjustments.

- 3) Begin your installation by cutting your factory system and removing the mufflers it is critical to cut the factory system as show above. This will leave you with the maximum amount of material to make adjustments to the system .
- 4) Now its time to install the PypeBomb. Slide the HVC21 band clamps over the slotted portion of the PypeBomb. Install the wire forms into the factory rubber hanger followed by the expanded end of the Pype Bomb onto the pipe you just cut.
- 5) Align the tip in the valance opening. Once you're satisfied with the alignment, tighten the HVC21 clamp. The use of air tools is highly recommended for this step. NOTE: trimming of the factory system may be required to achieve optimal alignment.
- 6) Finish by sliding the expanded portion over the factory piping. Be sure to file or grind off any metal burrs from cutting.
- 7) Align the tip in the valance opening and tighten the clamp.
- 8) Now that the clamps are tight, start up your Mustang and check for leaks.

Note: When tightening the HVC21 band clamps, make sure the I-block in the center of the clamp is against the head of the bolt. Failure to do so will result in the clamp not tightening properly or the I-block to break.